ENGAGE HQ PRO

Multimedia Fun Center

MT7001

User manual

EN

Introduction 2
Connections 3
Remote control 3
Power On 4
Functions of Main Menu 5
Settings 5
Language setting 5
Date setting 5
Wireless and network settings 6
Ethernet settings 7
Accounts and sync 7
Using web browser 9
Explorer 9
Install and uninstall third-party applications 10
Uninstall third-party applications 11
Picture Browser 11
Music Player 12
Video Player 12
Factory reset 13
Power Off 14
Compatible accessories 14
USB mouse/keyboard. 14
USB DVB-T tuner 15

Introduction

Thank you for buying a new multimedia fun center device. MT7001 will expand capabilities of every TV set: internet access, playing movies, viewing pictures, listening music, playing games. Device is based on Android operating system, it can be controlled via remote control or USB keyboard or mouse – please visit **www.media-tech.eu** to check latest accessories designed for this device.

Connections

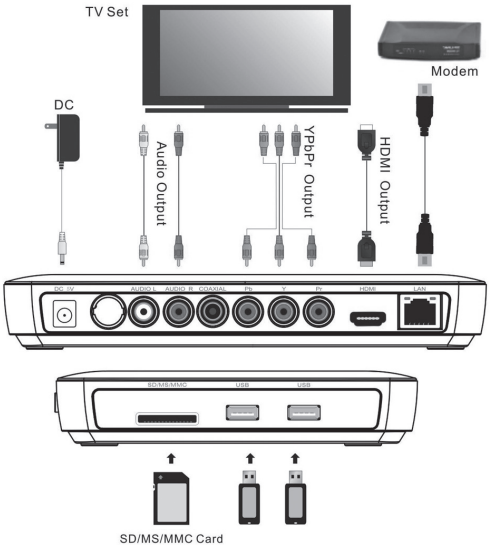

Note! Use only one type of connection: [HDMI] or [YPbPr and audio R/L].

Remote control

1. Power ON/OFF
2. Browser
3. Shift
4. Mute
5. Mouse control
6. Numeric keypad
7. Volume up/down
8. Page up/down
9. Zoom in/out
10. Home button
11. Notification
12. UP/DOWN/LEFT/ RIGHT/OK button
13. Menu
14. Exit
15. Page left/right
16. Delete
17. CVBS
18. Media control

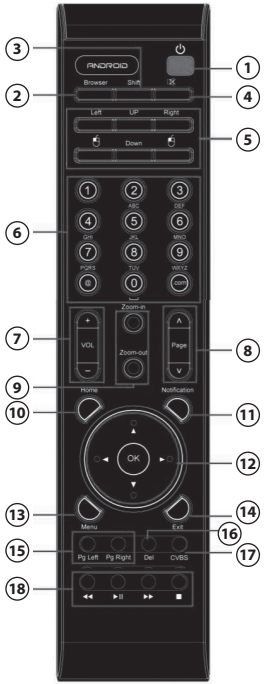

EN

Power On

Make all connections, turn your TV to appropriate output, then press "Power ON" button on remote control. It takes about 8 seconds to show system logo:

System is loading…
After about 50 seconds you will see main desktop as below:

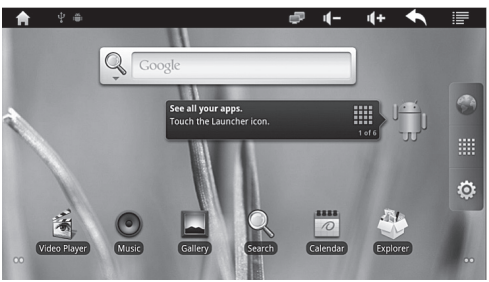

To switch between desktops click at left or right edge of screen:

To show available desktops press and hold on this icon:

Functions of Main Menu

On the main desktop press "Menu" button on remote to pop-up this menu:

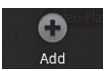

Add shortcuts, widgets to main desktop

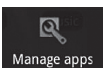

Direct access to application manager

Change wallpaper

Start Google search

Show system notification window

Show system settings menu

Settings

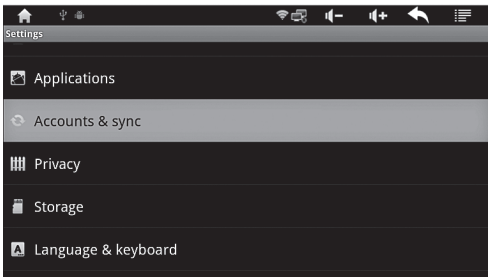

Language setting

Select "Language & keyboard", then click "Select language" and select desired system language.

Date setting

Go to "Settings/Date & time settings" and set manually or mark option "Automatic" – date will be synchronized

EN

automatically when device is connected to the internet.

Wireless and network settings

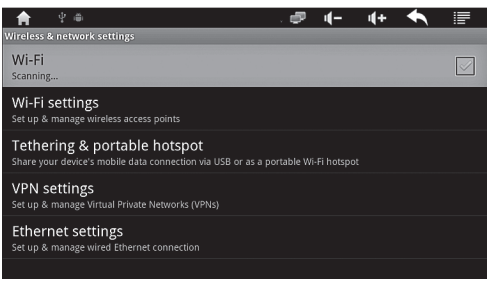
Wireless & network settings
Wi-Fi
Scanning...
Wi-Fi settings
Set up & manage wireless access points
Tethering & portable hotspot
Share your device's mobile data connection via USB or as a portable Wi-Fi hotspot
VPN settings
Set up & manage Virtual Private Networks (VPNs)
Ethernet settings
Set up & manage wired Ethernet connection

Click “Wi-Fi” to enable Wi-Fi card, next click “Wi-Fi settings”.

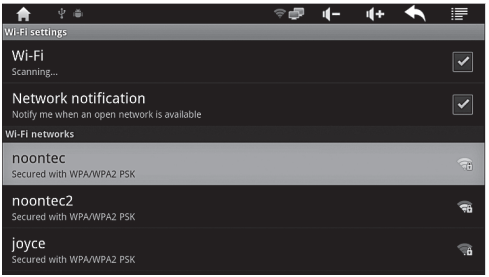

Click one of the available networks to make connection.

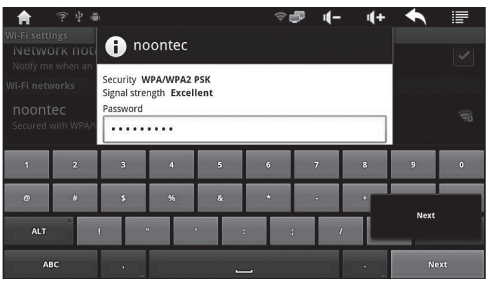

Enter password provided by your ISP operator.

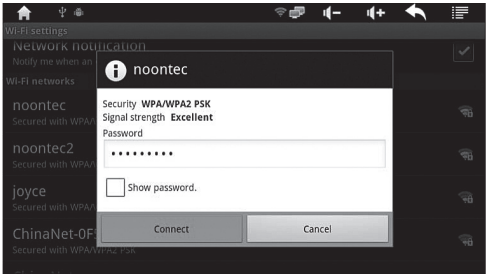

Click "Connect".

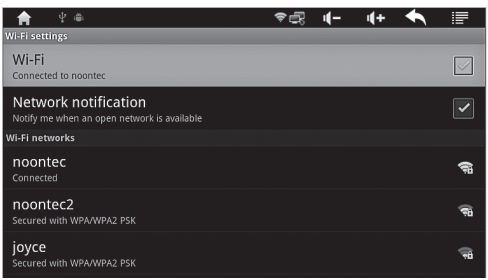

When connection is established you will see info under Wi-Fi option "Connected to...".

Ethernet settings

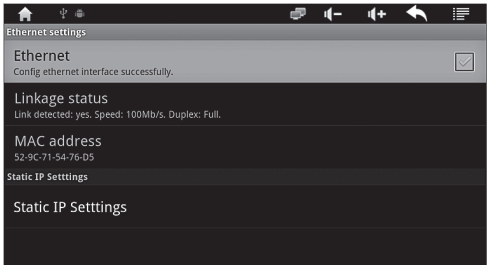

Click "Ethernet" if you want to use this interface (automatic configuration is enabled by default).
If you want to enter IP address manually click "Static IP Settings" and enter parameters provided by your ISP operator.

Accounts and sync

Click "Accounts&sync" to configure Google account. It is required in order to use e-mail or download applications from "Android Market".

EN

Note! You can add more subsequent accounts, but only for synchronization gmail, calendar events and contacts. For downloading applications from "Android Market" use Google account added as first.

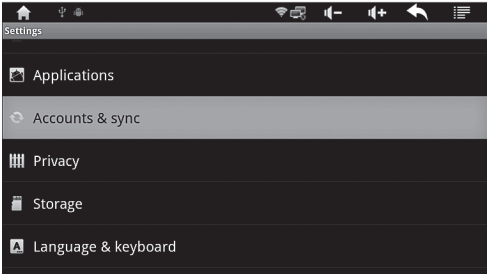

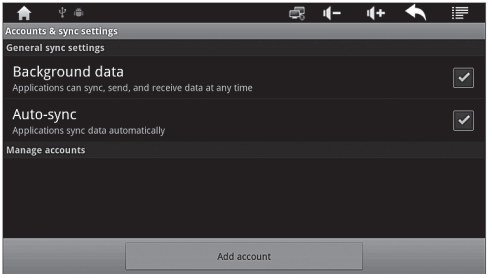

Now click "Add account". Follow on-screen messages to configure Google account.

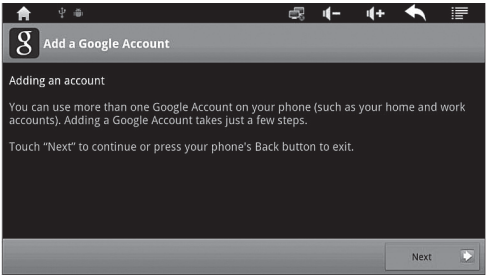
Add a Google Account
Adding an account
You can use more than one Google Account on your phone (such as your home and work accounts). Adding a Google Account takes just a few steps.
Touch "Next" to continue or press your phone's Back button to exit.
Next

Click "Next".

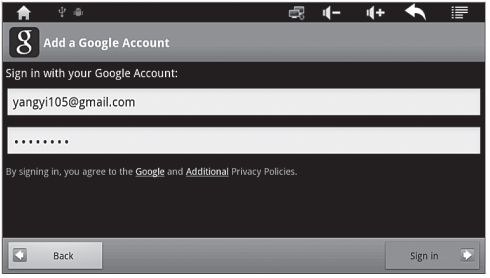
Add a Google Account
Sign in with your Google Account:
yangyi105@gmail.com
By signing in, you agree to the Google and Additional Privacy Policies.
Back
Sign in

Enter e-mail address and password, next click "Sign in".

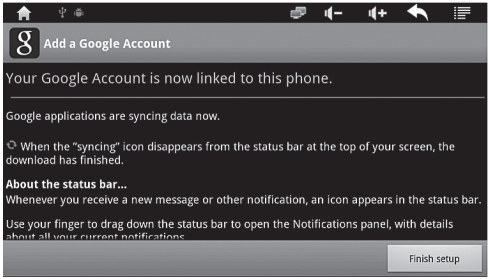
Add a Google Account
Your Google Account is now linked to this phone.
Google applications are syncing data now.
When the "syncing" icon disappears from the status bar at the top of your screen, the download has finished.
About the status bar...
Whenever you receive a new message or other notification, an icon appears in the status bar.
Use your finger to drag down the status bar to open the Notifications panel, with details
Finish setup

Now click "Finish setup" to end this process.

Using web browser

Click "Earth" icon on main desktop to start web browser.

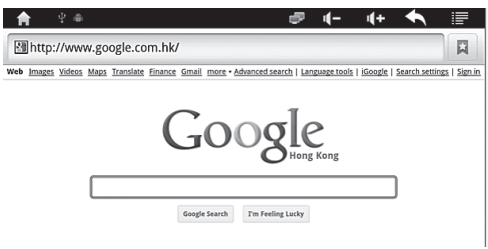
http://www.google.com.hk/
Web Images Videos Maps Translate Finance Gmail more Advanced search | Language tools | iGoogle | Search settings | Sign in
Google
Hong Kong
Google Search
I'm Feeling Lucky

Click on the page address to enter website address or click inside Google search field to enter phrase to search. A screen keyboard will pop-up.

Explorer

Click icon to start explorer application.

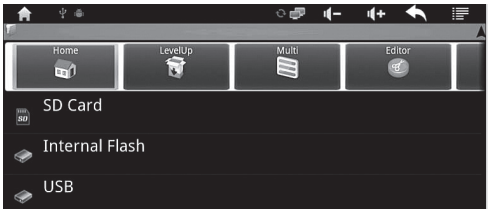

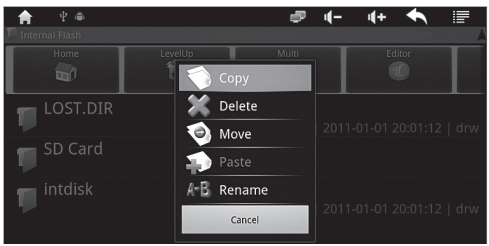

On selected item click and hold until menu pop-up, now select type of operation.

EN

Install and uninstall third-party applications

Run "Explorer" application, select *.apk file and click it.

If next window will pop-up, click "Settings".

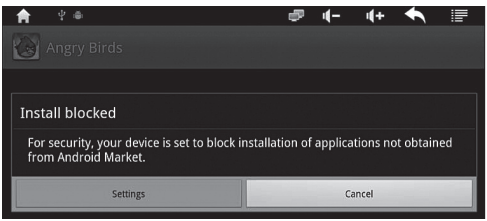
Angry Birds
Install blocked
For security, your device is set to block installation of applications not obtained from Android Market.
Settings
Cancel

Enable installing applications from unknown sources.

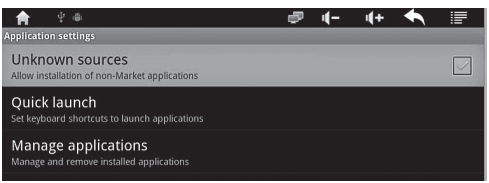

Go back to explorer and click again selected *.apk file. Click "Install" to continue.

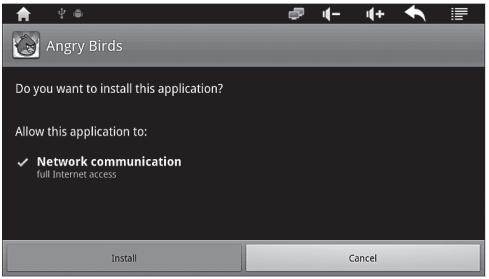

You can also use "ApkInstaller" application to conduct installation process. Click "Install".

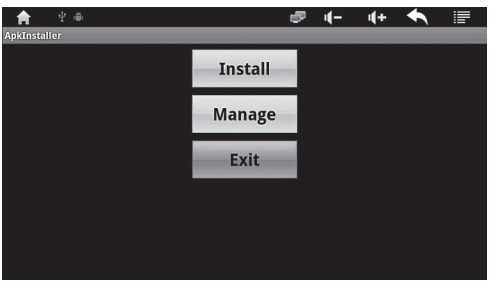

And click selected *.apk file.

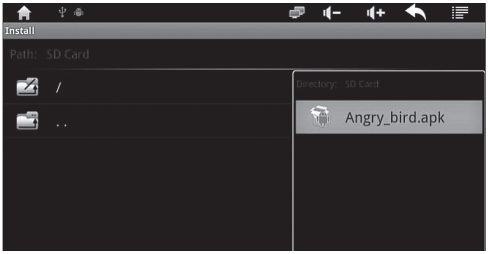

Uninstall third-party applications

Run “ApkInstaller” and click “Manage”. You will see installed application list.

Click on selected item.

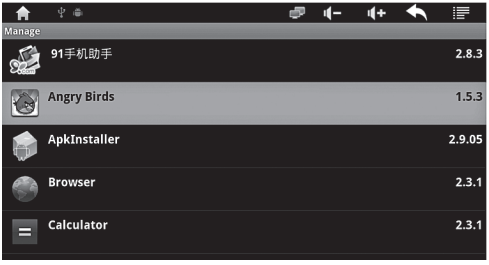

Next select desired operation for this item.

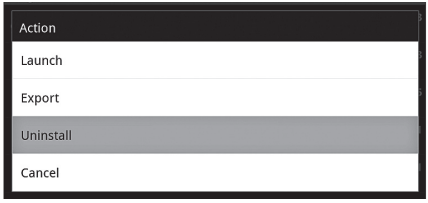

Picture Browser

Click icon to run picture browser. Application will scan all available storages and show folder with supported photo files:

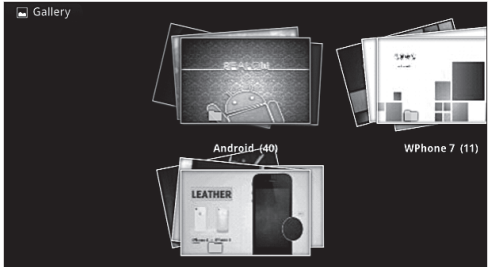

EN

Click and hold on selected picture to pop-up menu options.

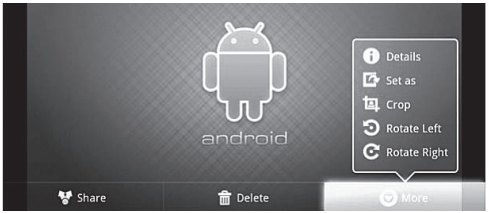

Music Player

Click icon to start music player. Application will scan all available storages and show only supported music files.

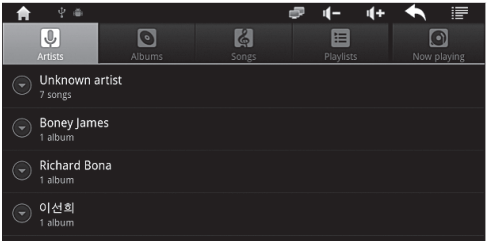

Click on selected item to play.

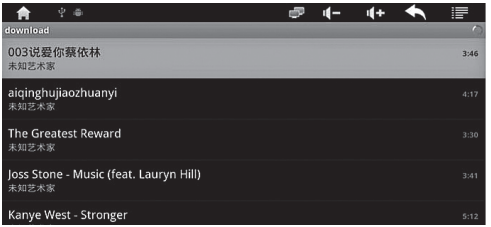

You can use media control buttons.

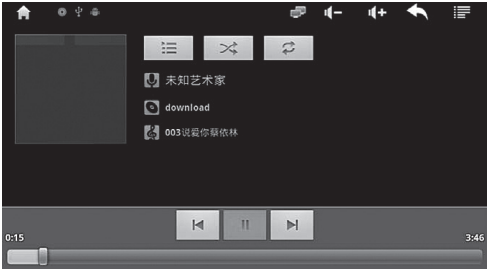

Video Player

Click icon to start video player. Application will

scan all available storages and show only supported video files.

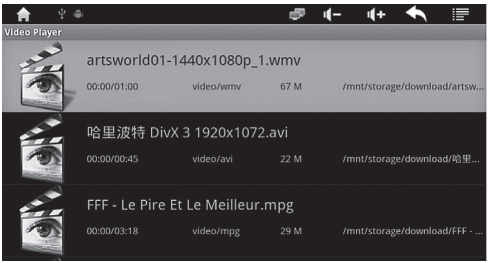

Click on selected item to view in full screen mode.

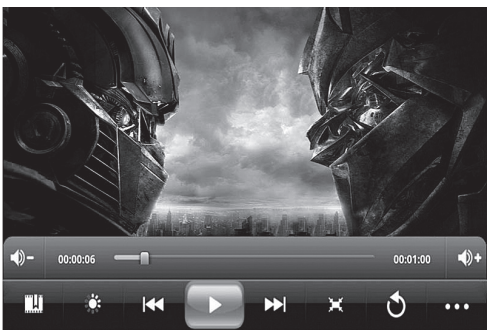

Press "menu" button on remote to pop-up menu:

Set bookmark to play file from this moment

Set screen brightness

Previous file

Play/Pause

Next file

Select screen size:
original, full screen, 16:9, 4:3

Back to player

Pop-up more options

Factory reset

If device is running slower than normal and restarting does not solve the problem you may perform factory

EN

reset. It is recommended to back up all user documents before this procedure. If you want to automatically restore application data, Wi-Fi passwords and Google account settings enable "Back up my data" option and "Automatic restore".

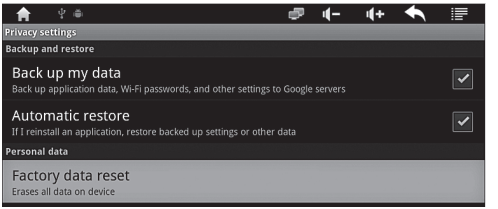
Privacy settings
Backup and restore
Back up my data
Back up application data, Wi-Fi passwords, and other settings to Google servers
Automatic restore
If I reinstall an application, restore backed up settings or other data
Personal data
Factory data reset
Erases all data on device

Click "Factory data reset".

Factory data reset
This will erase all data from your device's **internal storage**, including:
· Your Google account
· System and application data and settings
· Downloaded applications
To also clear music, pictures, and other user data, the **SD card** needs to be erased.
Erase SD card
Erase all the data on the device's SD card, such as music or photos.
Reset device

Now click "Reset device".

Now click "Erase everything". Device will power off. Now power on manually, device will be restored to factory settings, wait until initial desktop will be displayed.

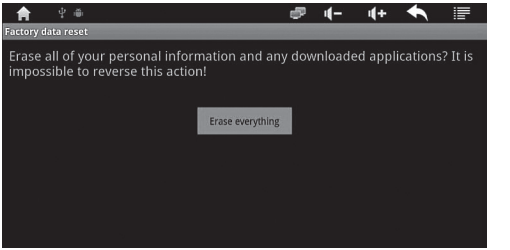
Factory data reset
Erase all of your personal information and any downloaded applications? It is impossible to reverse this action!
Erase everything

Power Off

Press "Power OFF" button on remote, a pop-up window will appear. Select "Standby" if you want to hibernate device or "Power OFF" to switch off.

Compatible accessories

USB mouse/keyboard.

You can use compatible mouse and keyboard to operate comfortably. You only need to plug it to USB port. You can find recommended device list at **www.mediatech.eu**.

USB DVB-T tuner

Plug aerial to DVB-T tuner and plug to USB port. Start "Hi TV" application to watch TV.

** Functions and technical specification of device are subject to change without prior notice. For technical support please visit www.media-tech.eu*